



SELECTABLE FREQUENCY **CHANNEL CHART**

CHANNEL 1 - 863.00MHZ
CHANNEL 2 - 863.40MHZ
CHANNEL 3 - 863.80MHZ
CHANNEL 4 - 864.20MHZ
CHANNEL 5 - 864.60MHZ
CHANNEL 6 - 863.20MHZ
CHANNEL 7 - 863.60MHZ
CHANNEL 8 - 864.00MHZ

CHANNEL 9 - 864.40MHZ
CHANNEL 10 - 864.80MHZ
CHANNEL 11 - 863.10MHZ
CHANNEL 12 - 863.30MHZ
CHANNEL 13 - 863.50MHZ
CHANNEL 14 - 863.70MHZ
CHANNEL 15 - 864.90MHZ
CHANNEL 16 - 865.00MHZ