



## **SELECTABLE FREQUENCY CHANNEL CHART (CHANNEL 38)**

**CHANNEL 1 - 606.40MHZ**  
**CHANNEL 2 - 606.80MHZ**  
**CHANNEL 3 - 607.40MHZ**  
**CHANNEL 4 - 607.80MHZ**  
**CHANNEL 5 - 608.40MHZ**  
**CHANNEL 6 - 608.80MHZ**  
**CHANNEL 7 - 609.20MHZ**  
**CHANNEL 8 - 609.60MHZ**

**CHANNEL 9 - 610.00MHZ**  
**CHANNEL 10 - 610.60MHZ**  
**CHANNEL 11 - 611.00MHZ**  
**CHANNEL 12 - 611.40MHZ**  
**CHANNEL 13 - 611.80MHZ**  
**CHANNEL 14 - 612.20MHZ**  
**CHANNEL 15 - 613.60MHZ**  
**CHANNEL 16 - 614.00MHZ**