

QWM 1960/QWM 1970 Frequency Chart - Highlighted Cells For 8 Way Multi System

Group 1		Group 2		Group 3		Group 4		Group 5		Group 6		Group 7		Group 8	
Number	Frequency	Number	Frequency	Number	Frequency	Number	Frequency	Number	Frequency	Number	Frequency	Number	Frequency	Number	Frequency
1	606 00	1	607 00	1	608 00	1	609 00	1	610 00	1	611 00	1	612 00	1	613 00
2	606 10	2	607 10	2	608 10	2	609 10	2	610 10	2	611 10	2	612 10	2	613 10
3	606 20	3	607 20	3	608 20	3	609 20	3	610 20	3	611 20	3	612 20	3	613 20
4	606 30	4	607 30	4	608 30	4	609 30	4	610 30	4	611 30	4	612 30	4	613 30
5	606 40	5	607 40	5	608 40	5	609 40	5	610 40	5	611 40	5	612 40	5	613 40
6	606 50	6	607 50	6	608 50	6	609 50	6	610 50	6	611 50	6	612 50	6	613 50
7	606 60	7	607 60	7	608 60	7	609 60	7	610 60	7	611 60	7	612 60	7	613 60
8	606 70	8	607 70	8	608 70	8	609 70	8	610 70	8	611 70	8	612 70	8	613 70
9	606 80	9	607 80	9	608 80	9	609 80	9	610 80	9	611 80	9	612 80	9	613 80
10	606 90	10	607 90	10	608 90	10	609 90	10	610 90	10	611 90	10	612 90	10	613 90